


Universal LCD / Plasma bracket


INSTALLATION GUIDE

STEP 1 Mounting Bracket to a Television

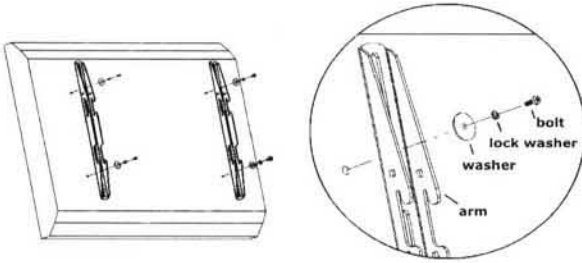

First, determine the diameter of the bolt your TV requires by hand threading them into the threaded insert on the back of the TV. If you encounter any resistance stop immediately! Once you have determined the correct diameter, see the appropriate diagram. You will thread the bolt through the appropriate lock washer, a washer, the arm, and finally into the TV. Make sure the arms are vertically centered and level with each other.

STEP 2 Mounting the Wall Plate

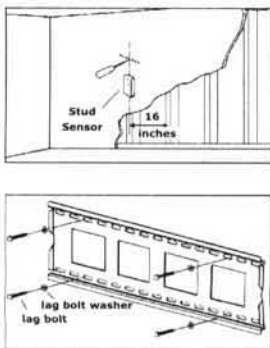

Wood Stud Mounting:


The wall plate must be mounted to two wood studs at least 12" apart. Use a high quality stud sensor to locate two adjacent studs. It is a good idea to verify where the studs are located with an awl or thin nail shown in diagram left. Pre-drill a 2.5" deep hole at the desired height in each stud using a 3/16" drill bit. Make sure these holes are in the center area of the studs and level with each other. Use the wall plate as a template to mark the location of the second hole in each stud. Drill 2.5" deep holes using the 3/16" drill bit in the marked location. Attach the wall plate to the wall using the four 1/4 * 2.5" lag bolts and four lag bolt washers. Make sure the wall plate is oriented so the flat surface in the center of the plate is against the wall and that a set of lag bolts is on each side of the plate.

Brick, Solid Concrete and Concrete Block Mounting:

Use the wall plate as a template to mark 6 holes locations on the wall. The outer holes must fall to left and right of the center of the plate. Three in the top row of slots and three more in the bottom row. Make sure these holes are level and there is at least 6" between any two holes. Pre-drill these holes with a 1/2" masonry bit to at least 2.5" in depth. Insert a concrete anchor into each of these holes. Make sure the anchor is seated completely flush with the concrete surface even if there is a layer of drywall or other material in front. Attach the wall plate to the wall using 6 lag bolts and 6 lag bolt washers.

Warning: DO NOT OVERTIGHTEN THE LAG BOLTS! Tighten lag bolts only until the lag bolt washer is pulled firmly against the wall plate.

STEP 3 Hang the TV onto the Wall Plate

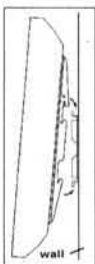

First hook the arms over the top of the wall plate, then let the bottom of the arms rotate in under the bottom of the wall plate. This process is shown in the diagram left.

* Above guide is for guidance and must be fitted by a suitable professional engineer for safety reasons.